



# A Quick Guide on How to Use your MagicSing

ET9K

## Step 1 What is inside your MagicSing ET9K carry bag?

1 Your MagicSing (ET9K) Carry Bag should contain the following items.

### BASIC ITEMS



Carry Bag Stand Main MIC AC Adaptor Handbook (Manual / Song list)


2 If you find any of the items above missing and/or damaged, please contact the store where you purchased the product from immediately.

## Step 2 How do you set up your MagicSing?

1 Connect the AV (Audio/Video) Cable to the RCA jack terminal on your TV(found either on the sides or at the rear of your TV) in the following manner :

- Red jack to the red terminal
- Yellow jack to the yellow terminal
- White jack to the white terminal

• If there are only two RCA jack terminals on your TV (Mono TV), connect the yellow jack into the yellow RCA jack terminal and connect the white jack into the other RCA jack on your TV.

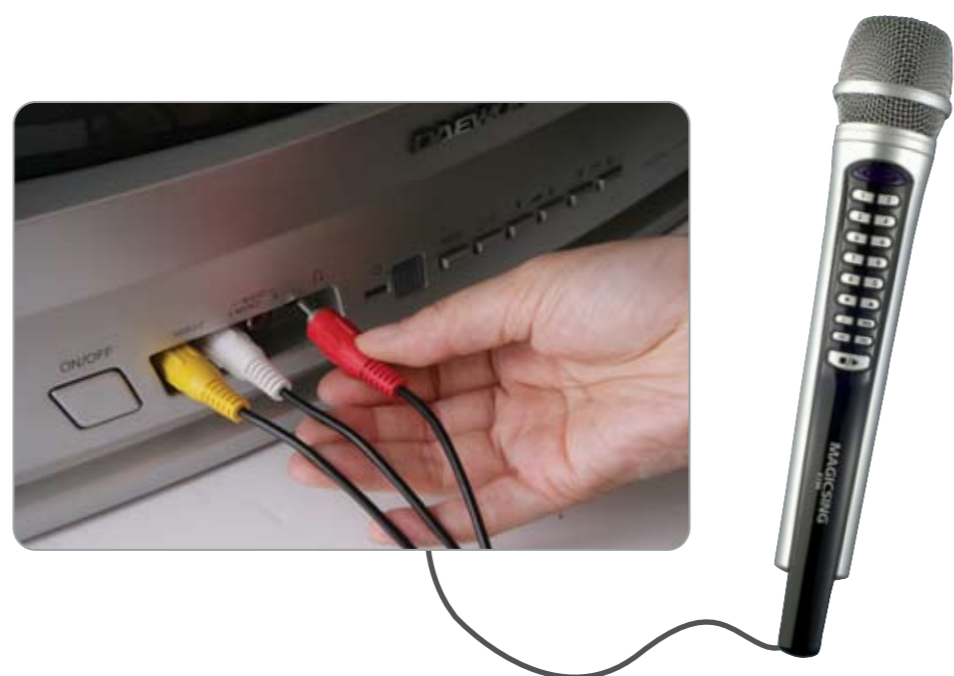

2 Connect the Male AC Adaptor Jack into the female AV Cable terminal (black). Plug the other end of the AC Adaptor to the main power supply




3 Turn your TV on and set it in the Video Mode.



- Please turn off the function "Automatic Volume Levelling" (AVL / AVC) on your television set.
- For a more advanced set up for your MagicSing, please refer to Chapter 02 of the User's Manual found in your MagicSing Handbook.

## Step 3 How do you start using your MagicSing?

1 Turn the MagicSing microphone power on by briefly pressing [ON]. A blue light in the LED Indicator indicates the mic is on and ready for use. The MagicSing Display Screen appears on your TV screen.

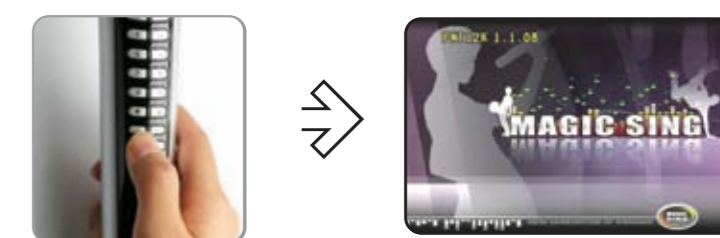

2 To select a song using your MagicSing microphone, wait for the word "Select a Song" to appear on your TV screen, and then press [V], [A]. When the Song List appears on your TV screen, continuously press either [V] or [A], and then you will notice a blue bar highlighting each song title on the list. If you wish to play the song highlighted by the blue bar, press [P]/[M].



3 You can also select a song by browsing through the pages of the Song list in the MagicSing Handbook. To play your selected song, just key in the numbers found beside the song title onto your MagicSing microphone and then press [P]/[M].



• To enjoy more advanced features of your MagicSing, please refer to the User's Manual found in the MagicSing Handbook.

## Q&A What should you do if you encounter the following problems?

Q I cannot turn my MagicSing on.

A 1. Check if the female (black) jack of the mic cable and the male AC adaptor are properly connected.  
2. Make sure that the AC adaptor is properly plugged into the main power supply. (Please refer to "Step 2. How do you set up your MagicSing?")

Q I cannot see anything or hear any sound on my TV.

A 1. Make sure that your TV is in the Video Mode.  
2. Make sure all the cables and the adaptor are properly connected. (Refer to "Step 2. How do you set up your MagicSing")

Q There is no sound coming from the mic.

A Check the microphone's volume level by pressing [VOL] on your microphone, continuously press it until the "MIC VOL" bar appears on your TV screen. Press [A] to increase the sound.

Q The MagicSing display screen has frozen or has disappeared from the TV screen.

A Press the power button off, and then turn it back on.



**Note :** For other problems, please refer to the topic "Troubleshooting" on Chapter 05-02 of the User's Manual found in the MagicSing Handbook.

ENTER-TECH CO.,LTD.

Enter B/D, 156-7, Ojeong-dong, Ojeong-gu, Bucheon-City, Kyunggi-do, Korea ( 421-814 ) TEL : +82-32-673-1671 / +82-2-2605-0884 | FAX : +82-2-2691-5354 | E-MAIL : enter@enter-tech.com | Designed by ENTER-TECH KOREA | Printed in China VER.101